

How to Reset an ELMB that has locked out (values not updated, zeroes)

- In GCS PVSS go to the Gas System concerned and click on the **ELMB_Status** button
- In upper right box called **MCB reset commands**, do the following steps:
 - Switch **VA** to Manual mode,, then open (will close automatically after ~ 1s),switch back to Auto Mode
 - Switch **VC** to Manual mode, then open (will close automatically after ~ 1s), switch back to Auto Mode
 - Switch **VD** to Manual mode, then open (will close automatically after ~ 1s), switch back to Auto Mode

